



Scrusher Deluxe Shoe and Boot Cleaner

RP14100



Details

Clean the bottom and sides of your shoes, boots and golf shoe spikes effectively without scratching. Lower area contains three rows of stiff nylon bristles to clean around spikes. The clog-free design allows dirt to fall through the brush rows. Elevated base for easier cleaning. Replaceable brushes available. Rubber foot pads prevent slippage or may be secured with spikes. Steel frame.

- Cleans bottom and sides of shoes and boots without scratching
- Three brushes on the bottom made of stiff nylon to thoroughly clean footwear
- Side brushes made of softer poly - won't scratch shoes
- Clog-free design allows dirt to fall through
- Elevated design for easy cleaning
- Weather resistant UV powder coated finish
- Steel frame
- Replaceable brushes available
- Made in U.S.A.

Specifications

Manufacturer	Scrusher
--------------	----------

Replacement Parts

RP14102	Bottom Brush
RP14105	Scrusher Brush Kit w/Hardware

Amacron Golf & Turf

19 Tate Drive Kerang, 3579

+61 2 8011 1001 Toll Free: 1300 AMACRON

<https://amacron.rrproducts.com/>